




Wireless Doorbell User Manual

(Model: HD03)

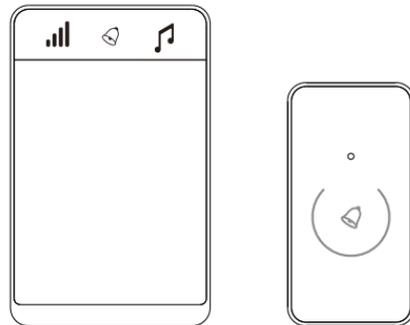

- This package includes:
- Wireless door chime
 - Wireless touch button
 - Hardware pack
 - Battery for touch button

Product Diagram

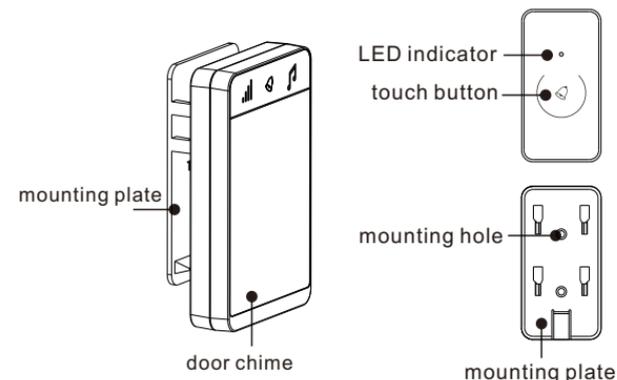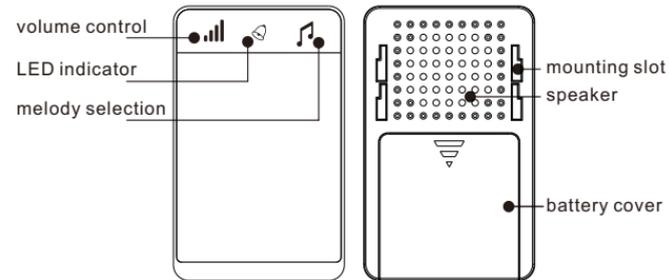


1

Battery Installation

A. Touch button

1. Remove back cover by pushing in tab located at the bottom of the touch button unit with a small screwdriver.
2. Install an alkaline 23A 12V battery, make sure battery is oriented properly.
3. Put back the back cover into place.

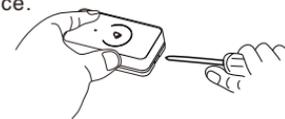

B. Door Chime

1. Remove the battery cover.
2. Install 3 alkaline AA batteries, make sure battery is oriented properly.
3. Put the battery cover back into place.


Mounting

Before mounting the touch button and chime, temporarily position them to be where you want them to be mounted. Press touch button to verify chime and touch button work properly. If chime does not sound, see Troubleshooting on page 5.

A. Mount touch button

- Use either screws or adhesive tape to mount touch button with mounting plate.
- To mount with screws, remove mounting plate from touch button.
- Attach plate to door jamb or wall and start mounting. After that, install the touch button back into place.
- When attaching plate using adhesive tape, make sure the surface of the door jamb or wall is clean and smooth.

2

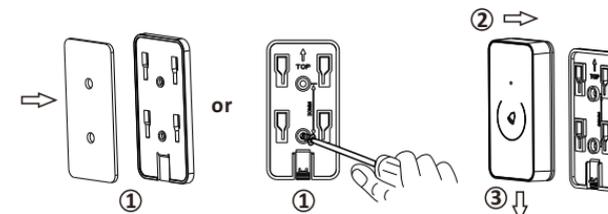

B. Mount door chime

- Use either screws or adhesive tape to fix the mounting plate first.
- With its mounting slots, attach the door chime onto the plate properly.
- When attaching plate using adhesive tape, make sure the surface of the wall is clean and smooth.

How to Operate?

1. Press the volume button to control the volume of melody. There are 3 adjustable volume levels: high, medium and low.
2. Press the melody selection button to select the melody you like. There are 36 different melodies with 16 chords.


Code Learning

This unit comes with a code learning function, which allows you to expand your unit with more touch buttons or door chimes. Follow the instructions below for code learning application.

1. Remove the battery cover of door chime.

3

2. Use a small screwdriver or alternative tool to press and hold the button close to the battery compartment, then press the touch button.
3. Release both buttons after a melody is heard, code learning application is successful. If not, repeat the above steps to learn the code again.

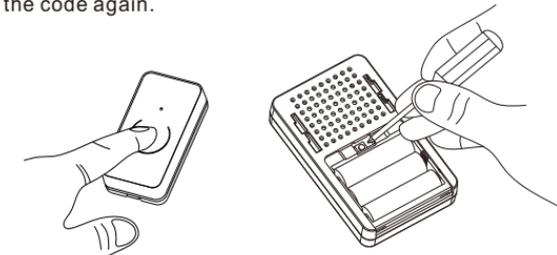

Technical Data

- Touch button battery: 23A 12V (included)
- Chime batteries: 3 x AA 1.5V (not included)
- Volume: 70 - 100dB
- Range: up to 150m (open space)
- Number of melody: 36

Warning

1. Please do not dismantle the unit and repair it yourself. This is to avoid any breakdown of components or create hazard.
2. Please use good quality alkaline batteries.

4

3. Please keep the unit away from objects or areas with electromagnetic field/ moist/ high temperature.
4. The effective range of the unit depends on location, temperature and battery condition.

Troubleshooting

Problems	Solutions
1. Chime does not sound?	<ul style="list-style-type: none"> • Check orientation of touch button battery. • Check orientation of chime battery. • Check the battery, replace with new batteries if necessary. • Make sure the touch button and the chime codes are the same. If not, follow the code learning instruction to reset the code.
2. Batteries seem OK, but the chime does not work when installed?	<ul style="list-style-type: none"> • Do not mount the chime or touch button on metal or near metal studs. This reduces the transmitting range. • Check the battery, replace with new batteries if necessary. • Try placing the chime at different locations and closer to the touch button. You can also try to position the chime at a different angle to increase the range.

5